



INCLUDED PARTS AND INSTRUCTIONS


STEP 1

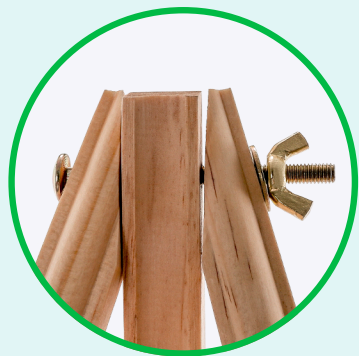

Face the angled sides of the legs towards each other so that the top creates a triangle. Use the **medium length bolt** to secure.


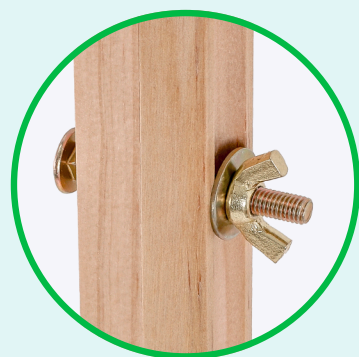


Line up the leg halves based on the grooves cut into the wood. Use the **shortest bolts** to secure the leg halves together.

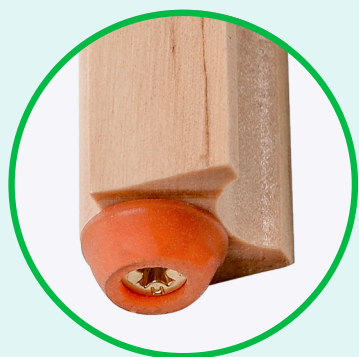

Make sure the feet are at the bottom of your easel and the drilled holes are at the top.


STEP 2

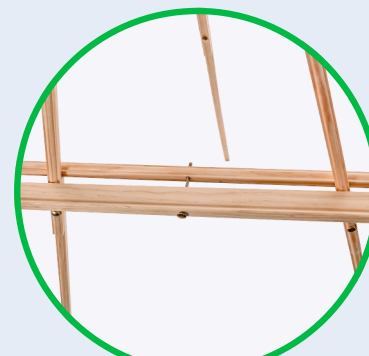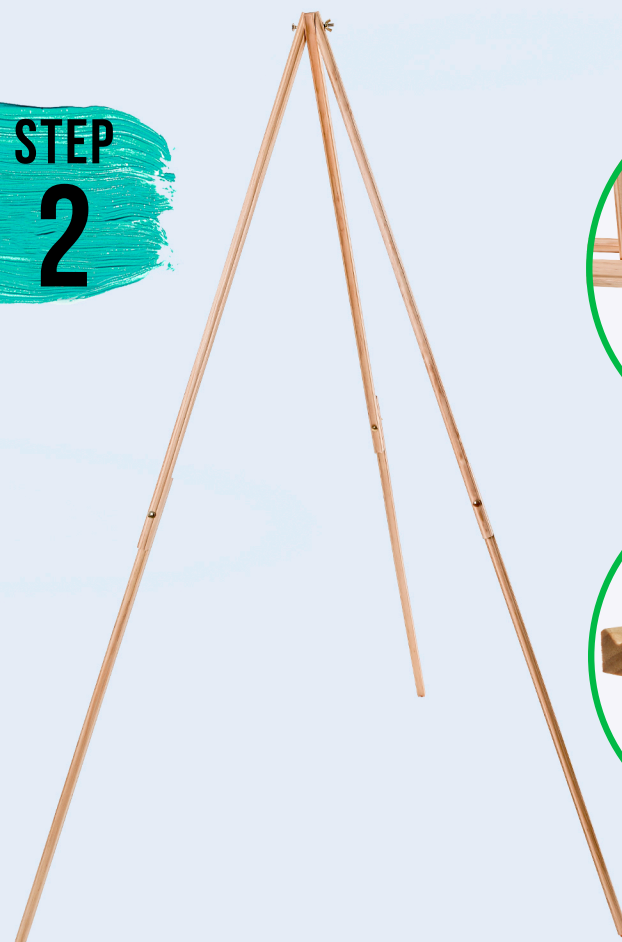

Clamp the easel tray and the remaining leg piece around the front two legs using the **largest bolt** to secure.

STEP 3

Hook the loop end of the chain onto the longest bolt before you tighten the wing-nut down.

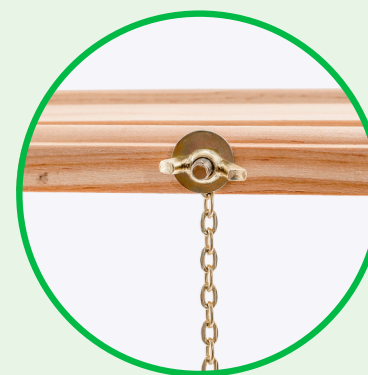

Hook the remaining end of the chain onto the small bolt of the back leg, or drill the attached screw into the wood for a more permanent attachment.

